

MODBUS地址对照表：

DIGITAL VARIABLES 数字变量

ID	DESCRIPTION	MEASURE UNIT	READ/WRITE
	UNIT STATUS 机组运行状态		
1	Unit (Evaporating Fan) ON 风机运行状态	-	R
2	Compressor 1 压缩机 1	-	R
3	Compressor 2 压缩机 2	-	R
4	Electrical Heaters 1 电加热器 1	-	R
5	Electrical Heaters 2 电加热器 2	-	R
6	Dehumidification 除湿	-	R
7	Hot gas by-pass 热气旁通	-	R
8	Humidification 加湿	-	R
9	Emergency Mode 紧急模式	-	R
	ALARMS 报警		
20	Wrong Phases Sequence 相序错误	-	R
21	Smoke/fire or flooding (only EX units with PCO1-SMALL) 烟/火或者溢水报警 <small>(适合使用PCO1小型板的机组)</small>	-	R
22	Smoke/fire 烟雾/火报警	-	R
23	Flooding 溢水报警	-	R
24	Loss of air flow 低风量报警	-	R
25	High pressure – circuit 1 高压报 (制冷回路1)	-	R
26	High pressure – circuit 2 高压报 (制冷回路2)	-	R
27	Low pressure – circuit 1 低压报警 (制冷回路1)	-	R
28	Low pressure – circuit 2 低压报警 (制冷回路2)	-	R
31	Heaters overheating 电加热过热报警	-	R
32	Dirty filter 过滤器脏堵报警	-	R
33	Humidifier – High Current 加湿器过电流报警	-	R
34	Humidifier – No water 加湿器缺水报警	-	R
35	Humidifier – Low Current 加湿器低电流报警	-	R
36	EEPROM Failure EEPROM失效报警	-	R
37	Loss of water flow 水流量低报警	-	R
38	Room temperature sensor failure 室内温度传感器失效报警	-	R
39	Room humidity sensor failure 室内湿度传感器失效报警	-	R
40	Supply air temperature sensor failure 送风温度传感器失效报警	-	R
41	Cold water temperature sensor failure 冷冻水侧温度传感器失效报警	-	R
42	Hot water temperature sensor failure 热水侧温度传感器失效报警	-	R
43	Outdoor air temperature sensor failure 室外温度传感器失效报警	-	R
44	LAN disconnected LAN 未连接	-	R
45	High room temperature 室内温度过高报警	-	R
46	Low room temperature 室内温度过低报警	-	R
47	High room humidity 室内湿度过高报警	-	R
48	Low room humidity 室内湿度过低报警	-	R
49	High water temperature 水温过高报警	-	R
50	Wrong password 密码错误报警	-	R
51	General Alarm 综合报警	-	R
52	Mainteinance Signalling 维护提示	-	R
	COMMANDS 按钮/指令		
80	ON/OFF unit 机组开关	-	R/W
81	Alarm Reset 报警复位	-	R/W

R 只读 / W 可写

ANALOGIC VARIABLES 模拟变量

ID	DESCRIPTION	MEASURE UNIT	READ/WRITE
	SENSORS VALUES 传感器数值		
1	Room temperature 室内温度	°C	R
2	Room relative humidity 室内相对湿度	%	R
3	Supply air temperature 送风湿度	°C	R
4	Cold water temperature 冷冻水湿度	°C	R
5	Hot water temperature 热水湿度	°C	R
6	Outdoor air temperature 室外湿度	°C	R
	OUTPUT VALUES 输出值		
7	Cold water valve ramp 比例调节-冷冻水阀	%	R
8	Hot water valve ramp 比例调节-热水阀	%	R
9	Evaporating fan speed 风机转速	%	R
	SET-POINTS 设定值		
20	Cooling setpoint 制冷设定温度	°C	R/W
21	Heating setpoint 加热设温度值	°C	R/W

INTEGER VARIABLES 整型变量


ID	DESCRIPTION	MEASURE UNIT	READ/WRITE
	SET-POINTS 设定值		
20	Dehumidification set 除湿设定点	%	R/W
21	Humidification set 加湿设定点	%	R/W
22	High room temperature threshold 室内温度过高阀值	°C	R/W
23	Low room temperature threshold 室内温度过低阀值	°C	R/W
24	High room humidity threshold 室内湿度过高阀值	%	R/W
25	Low room humidity threshold 室内湿度过低阀值	%	R/W

R 只读 / W 可写

R/W 可读可写